


PC used for measurement of a potentiometer, records angle or displacement dependent on type of potentiometer.

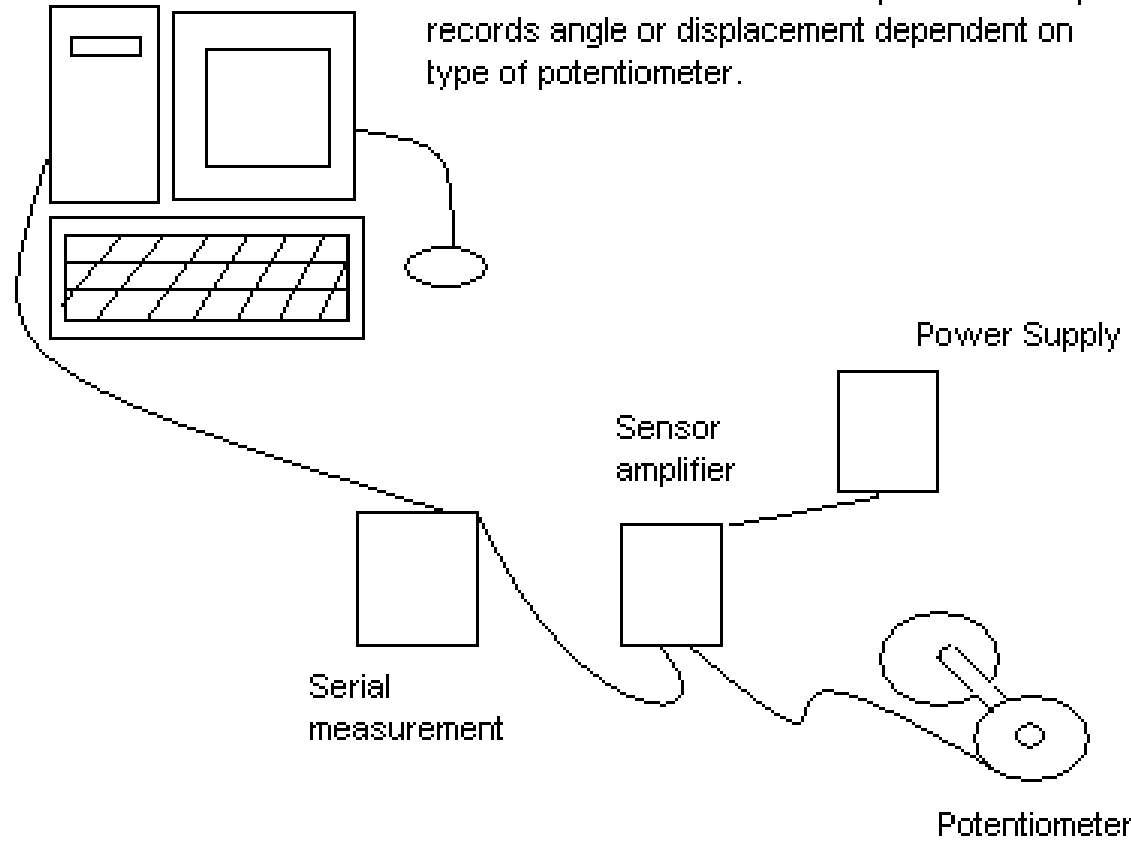

Notes:  
PC, USB serial port connected serial measurement device, sensor amplifier, and sensor require software to form a complete system.

Robert Owen Inc.  
PO Box 227  
Albertson, NY 11507  
[www.robertoweninc.com](http://www.robertoweninc.com)  
pc sensor app 1